Panel Extender Installation

Panel extenders sold by Sneeze GuardEZ can be installed in minutes with basic hand tools. No drilling is required, all acrylic panels come pre drilled with bracket mounting holes.


Tools needed for installation:

- 1. Phillips head screwdriver
- 2. Flat head screwdriver

*Please note, the use of a power drill or impact driver is NOT recommended and could result in damage to the Plexiglas or aluminum brackets.

Step 1

Align the Panel Extender Bracket mounting holes to the pre-drilled Plexiglass holes. Using the supplied hardware, attach the brackets to the Plexiglas (be careful not to over torque the screws)..

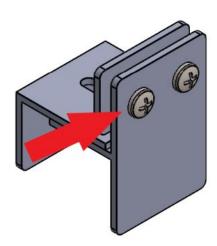

Step 2

Place the Panel Extender Bracket on the cubicle wall or panel. See figure #1. Using the supplied hardware, screw the two components of the bracket together. See figure #2. Ensure you have a snug fit on the panel wall before fully tightening.

Fig.1


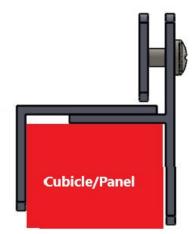


Fig.2

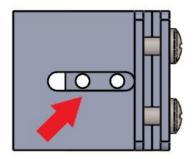

For questions or assistance with installation please call (262) 444-6080 or email jim@ofwgo.com